


TENNISMATIC COACHING TROLLEY

Assembly Instruction

1. Assembly Accessories containing:

- 1 x large basket + lid (top)
- 1 x small basket (bottom)
- 1 x tube Basket
- 1 x accessories basket
- 1 x Frame
- 4 X wheels with installed bushes
- 4 X additional bushes (to be used as spacers for front wheels)
- 4 X hub caps
- 1 X hub cap tool

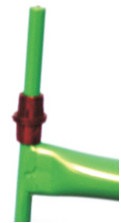

2. Remove trolley frame, level on ground with suitable support such as wooden blocks.

For front wheels - insert 2 bushes into the **front frame axle** as shown in picture.

Do the same to the other side of the front wheel frame.

3. Insert Wheel and Hub Cap then use Hub Tool and Hammer it into position.

4. Install the remaining two back wheels the same as step 3 but without spacing bushes.



After correctly install wheels, frame should be folded as shown



5. Space out the frame then put:

1. small basket onto the bottom frame
2. top basket on top half of the frame
3. hook tube basket onto the small basket
4. hook accessories basket onto the top basket

